




ATS – Smart port Handleiding

- Geya G2R Automatic Transfer Switch
- Solis hybride omvormers met Backup
- Solis hybride omvormers met Smart Port

Dit is een samenstelling uit de verschillende handleidingen van bovengenoemde producten. Aan deze handleiding kunnen geen rechten worden ontleend. Installaties dienen te worden uitgevoerd conform de geldende richtlijnen.

Wees bewust van Neutral – Earth bounding

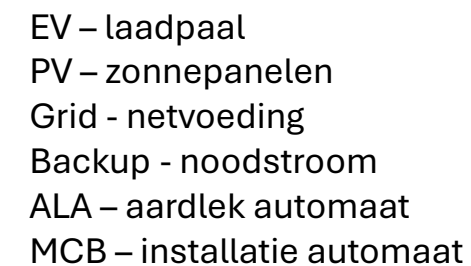


Neutral – Earth bounding:
Bij netuitval worden nul en
aarde gekoppeld in de Solis
omvormer zodat aardlek
automaten blijven werken.

Wees bewust van vermogen PV omvormer!



Geya G2R Automatic Transfer Switch 3 Fase 63A

Let op de inbouwhoogte van de module!

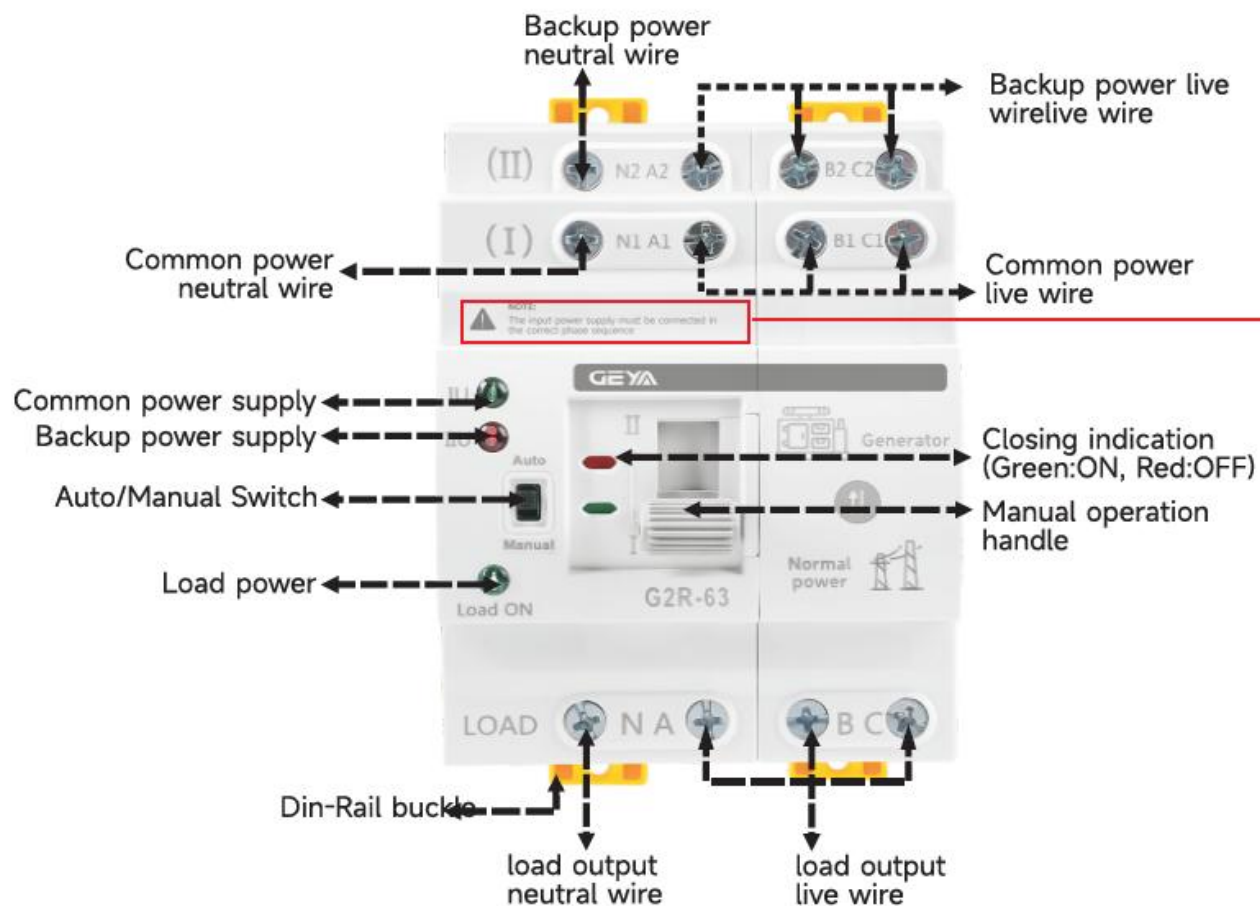

NOTE:

The input power supply must be connected in the correct phase sequence

Common power supply

When the power supply is abnormal (under voltage or over voltage state)
Flashing indicator light

Backup power supply

When the power supply is abnormal (under voltage or over voltage state)
Flashing indicator light

Solis S6-EH3P(8-15)K02-NV-YD-L Connections

